


E10 Quick User Guide

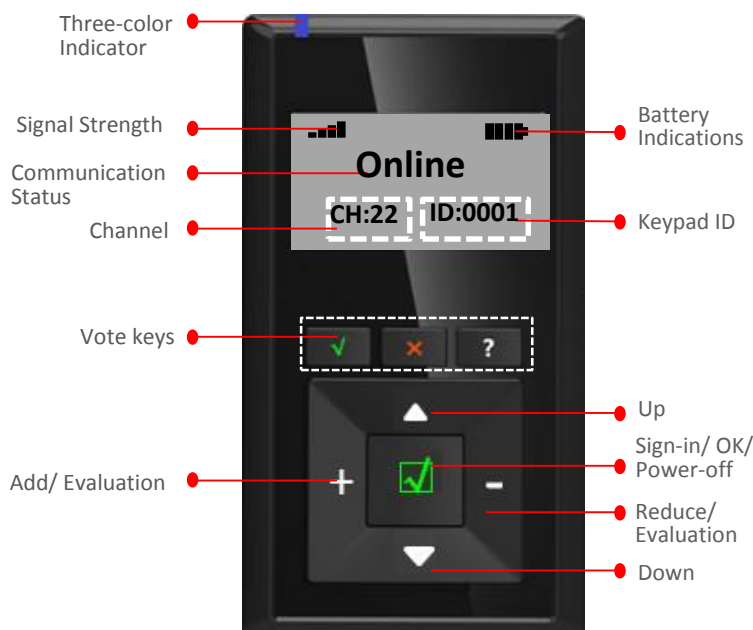

Keypad Management

- **Turn on:** Press any key to turn it on.
- **Turn off:** Press for 3 seconds or more to turn it off.
- **LED indication:**

Keypad is offline: LED flashes in green slowly.

Keypad is online: LED flashes in red slowly.

Start vote: LED flashes in green quickly. **Press a key to vote:** LED flashes in blue slowly. **Voting data submitted successfully:** LED keeps in green.

Website: www.sunvote.com.cn

Version V1.0 Date: 2016-09-05

- **Light for key press guidance:** when start vote, the corresponding keys will be lighten for guidance. For example, will lighten when start vote with YES/NO.

- **Keypad language, Vibration, and LCD background:** controlled by the base station. It can be set via "SunVote Keypad Features Tool".

Keypad Match



- New keypad should match to the specific base station before use to avoid it being reused and added randomly.
- The matched keypads and base station can be identified automatically when used as a whole set without matching them again.

Steps to do match:

(If you are end-user, it is set by default from factory).

Step 1: Open SunVote ARS Tool Kit , connect base station. Click , then click ready to do match.

Step 2: On the keypad, press and at the same time until LCD shows matching.

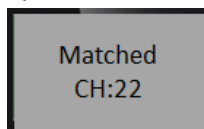
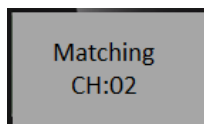


Step 3: LCD will show "Matched" when success.

Function Applications



- **Sign in**

  Press to sign in.



- **Vote**

  Press for Yes/No/Abstain.




- **Split voting**

When to use: a shareholder has several votes to distribute at one time or represents a few persons with different votes, split vote is helpful.



How to use:

1) Start vote, and press / / to split voting.

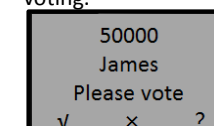

2) Press to switch the percentage of ballots between the number ballots.

3) Press / to select to vote for v/x/?, and press / to add or subtract ballots.

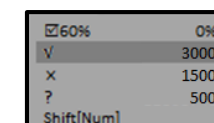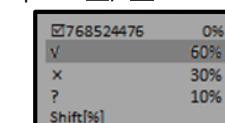

Tech-Support Tel: 0086 73185125959-816

 
 
E-mail: support@sunvote.com.cn

4) Press to submit the final votes.




Evaluation

Press / to select evaluation level, press to submit.




Candidate Election

1) Press / to view candidates, press to select a candidate, another press or press to cancel a candidate.

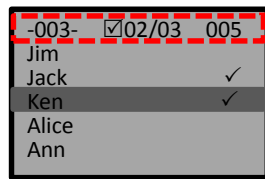


“-003- “: current candidate number
“02/03”: selected candidates/candidates to be selected
“005”: count of candidates

Press to view all the candidates.

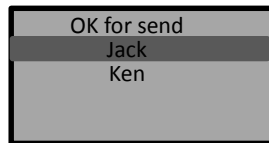


Press to modify, and press to submit.

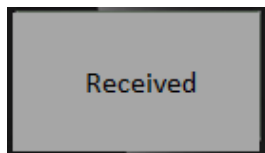


Cumulative Voting


1) Press / to view all the candidates,

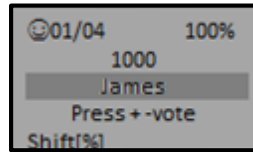

2) Press / to add or subtract the numbers or percentage of ballots.

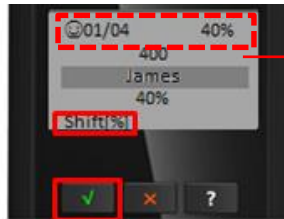


“01/04 “: current candidate number/ count of candidates
“40%”: percentage remaining

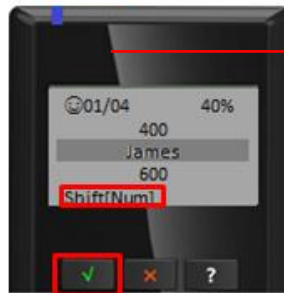


Press to switch the percentage of ballots between the number ballots.

3) Press to confirm the selected candidates.

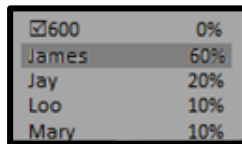

4) Press to submit.

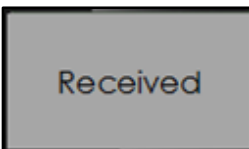

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.